

WAHL®

© 2010 Wahl Clipper Corporation
 part no. 9327-102

INSTRUCTIONS FOR THE USE AND CARE OF WAHL CLIPPERS

IMPORTANT SAFEGUARDS

When using your electrical appliance, basic precautions should always be followed, including the points listed below. (Read all instructions before using.)

DANGER

To reduce the risk of death or injury by electric shock:

- 1 Do not reach for an appliance that has fallen into water. Unplug immediately. Some electrical parts inside the clipper are electrically live, even with the switch "off".
- 2 Do not use while bathing or in a shower.
- 3 Do not place or store appliance where it can fall or be pulled into a tub or sink. Do not place in or drop into water or other liquid.
- 4 Always unplug this appliance from the electrical outlet immediately after using.
- 5 Unplug the appliance before cleaning.

WARNING

To reduce the risk of burns, fire, electric shock or injury to persons:

- 1 An appliance should never be left unattended when plugged in.
- 2 This appliance is not suitable for use by people (including children) with physical, sensory or mental disabilities or who do not have the relevant experience or knowledge of using such appliance unless under the supervision of or after having received instruction in the use of the appliance by an individual who is responsible for their safety. Children should be supervised to ensure they do not play with the appliance.
- 3 Use this appliance only for its intended use, as described in this manual. Do not use attachments not recommended by the manufacturer.
- 4 If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- 5 Keep the cord away from heated surfaces.
- 6 Never operate the appliance with the air openings blocked or while on a soft combustible surface, such as a bed or couch, where air openings may be blocked. Keep the air openings (if any) free from lint, hair or the like.
- 7 Never drop or insert any object into any opening on this appliance.
- 8 Do not use outlets or operate with aerosol (spray) products or where oxygen is being administered.
- 9 Do not use this appliance with a damaged or broken comb with teeth missing from the blades, as injury may occur. Before use, make certain blades are aligned properly. (See Clipper Maintenance Instructions.)
- 10 During use, do not place or leave appliance where it may be damaged by an animal or exposed to weather.
- 11 To disconnect, turn all controls to "OFF"; then remove plug from outlet.
- 12 Only use hair clippers to cut human hair.
- 13 Only connect the appliance to an AC mains power supply. Note the rated voltage on the rating plate.

SAVE THESE INSTRUCTIONS

This clipper has been designed for household use.

A- Bottom blade B- Switch
 C- Top blade D- Power screw

CLIPPER MAINTENANCE

Your Wahl clipper blades were oiled and aligned before leaving our factory; however, it is possible for blades to get bumped out of alignment. Blades must be realigned if they have been removed for cleaning or replacement. To determine if realignment is necessary, compare your clipper blades with diagram G.

- 1 End of top blade teeth should be approximately 1/32" (.64 mm) back from bottom blade. This is important so that the clipper does not cut too close or allow the moving cutter to touch the skin.
- 2 Extreme left-hand tooth of top blade must be covered or to the left of the first small tooth of bottom blade.
- 3 Extreme right-hand tooth of top blade must be touching the big tooth on the bottom blade.

If blade alignment is incorrect, add a few drops of Wahl Clipper Oil to the blades, turn clipper "On" for a few moments, turn "Off" and unplug. Loosen screws slightly and adjust (steps 2-4 listed above). Tighten screws after blades are aligned. Other than blades this clipper has no user serviceable parts. (diagram I)

OIL (J)
 The blades of your new clipper should be oiled every few haircuts. Simply place a few drops of Wahl Clipper Oil on the teeth of the blades. Use only the Wahl Clipper Oil included in the pack. Due to the high speed of your Wahl clipper, the correct type of oil must be used. Do not use oil, grease or any type of mixed lubricant or kerosene or any solvent, as the solvent will evaporate and leave the thick oil, slowing down the blades. Wahl Clipper Oil is a very thin, natural oil which will not evaporate and will not slow down the blades.

POWER SCREW (Not found on all models of Wahl Clippers)

If your clipper has a power screw, it has been adjusted for peak efficiency before leaving the factory. However, if voltage in your home is low, you may need to readjust it.

To adjust power, use the plastic brush, a screwdriver or a thin coin to turn power screw in a clockwise direction until the arm strikes the coil, making a noise. Then, slowly turn power screw out (counterclockwise), just until noise stops. This is the maximum power setting. (K)

CORD
 The cord should not be used to pull the clipper. Since freedom of movement needs to be maintained, care should be used to keep the cord untwisted and unobstructed. When stored, the cord should be coiled and the unit placed in original box or storage pouch (if provided).

If your clipper has a polarized plug: To reduce the risk of electric shock, this appliance has a polarized plug (one blade is wider than the other). This plug fits in a polarized outlet only one way. In the event the plug does not fit fully in the outlet, reverse the plug. In the event it still does not fit, contact a qualified electrician to install the proper outlet. Do not change the plug in any way.

WIRING
 WARNING: If the supply cord is damaged it must be replaced by the manufacturers service agent or a similarly qualified person in order to avoid a hazard. The wires in the mains lead of this clipper are coloured in accordance to the following code:

Blue (Neutral (N)) Brown live (L) Green-yellow (E)

This appliance is fitted with a 3pin plug which has a 3amp fuse fitted. If the plug is not suitable for your socket or becomes damaged, it should be cut off and disposed of and a suitable plug fitted as detailed below.

As the colours of the wires in the mains lead of this clipper may not correspond with the colour markings identifying the terminals in your plug proceed as follows. The wire which is coloured BLUE must be connected to the terminal in the plug which is marked with the letter 'N' or coloured BLACK OR BLUE. The wire which is coloured BROWN must be connected to the terminal in the plug with the letter 'L' or coloured RED OR BROWN. The wire which is coloured GREEN AND YELLOW must be connected to the terminal in the plug which is marked with the letter 'E' or coloured GREEN OR GREEN/YELLOW.

WAHL'S GUIDE TO FOOLPROOF HOME HAIRCUTTING

Before you cut your hair:

1 Your clipper should be clean, oiled and in perfect working condition.

2 If your kit includes a plastic cape, place it around the neck, tying the strings and overlapping the cape portion to prevent hair falling from inside the collar. If the cap is provided, a towel will do nicely.

3 Position the person whose hair is to be cut on a stool or chair so that the top of his head is about even with your eyes.

4 After combing the hair to remove all tangles, hold the clipper in a relaxed, comfortable grip, with the nameplate under the palm near your index finger. This grip will help you maintain comfortable, accurate cutting control.

NOTE: To attach guide combs, hold comb with the teeth up. Snap guide comb attachment firmly to the bottom of the clipper blade. (L)

Depending on the kit you purchased your kit may include one of the following:

Adjustable Guide Combs - allowing multiple cutting lengths in the convenience of a single comb.

Individual Black Guide Combs - providing predetermined lengths indicated on each guide comb.

Individual Color Guide Combs - providing predetermined lengths indicated on each guide comb. Combs are also color coded for quick cutting length reference.

Using an adjustable guide comb:

The small adjustable guide comb has five settings from 1/8" to 5/8" (3mm to 16mm) in 1/8" (3mm) increments. (M)

The large adjustable guide comb has five settings from 3/4" to 1-1/4" (19mm to 32mm) in 1/8" (3mm) increments. (N)

Using your thumb, you can change the length of the cut by simply sliding the adjustable lever to the next position. Both adjustable guide combs have positive click stops and indicators that show position number and cutting length in millimeters for quick and easy setting identification.

The large adjustable guide comb can be used from the ear to the crown of the head. (O1)

The small adjustable guide comb can be used from the nape of the neck to the ear area. (O2)

Using individual (black or colored) guide combs:

Some kits do not include all Wahl guide combs. However, any of these combs (or additional accessories not listed here) may be available from your dealer or can be ordered directly from Wahl.

INDIVIDUAL GUIDE COMB LISTING:

• 3mm - Black/Red	• 6mm - Black/Purple
• 10mm - Black/Dark Blue	• 13mm - Black/Orange/Pink
• 16mm - Black/Yellow	• 19mm - Black/Lavender
• 22mm - Black/Green	• 25mm - Black/Light Blue
• 31mm - Black/White	• 38mm - Black only
• Right Ear Taper - Black only	• Left Ear Taper - Black only

CUTTING HAIR FOR MEDIUM TO LONG CUTS: (P)

The first time you cut the hair, cut only a small amount until you become accustomed to how long each guide comb leaves the hair. Always start by placing the largest guide comb on the clipper, then use shorter combs (or settings - if using adjustable guide combs) if a shorter length is desired.

Remember between professional haircuts, the hair grows evenly all over the head and a light trimming at the lower neck and sides may be all that is needed to bring back that neat, well-groomed look.

For uniform cutting, allow the clipper to cut its way through the hair. Do not force it through at a faster rate.

1 Start by combing the hair so it falls into its natural direction.

2 Place the largest guide comb onto your clipper and start by trimming the sides from the bottom upwards.

Hold the clipper lightly against the hair, with the teeth of the guide comb pointing up but flat against the head. Slowly tilt the clipper up and outward through the hair, cutting only a small amount at a time.

Repeat around sides and back.

If you desire shorter hair, either change to a shorter guide comb (or setting - if using adjustable guide combs) or apply more pressure and less lift away from head with the present attachment.

This entire procedure requires practice, and it is always better to leave too much hair the first few haircuts.

For the top of the head, you will give a short haircut if you use the 1" guide comb (if your kit includes the 1-1/4" or 1-1/2" guide comb, you may use this for a slightly longer cut). With the teeth flat against the head, slowly start trimming from the front to the back. Again, it is better to leave the hair longer the first few haircuts.

FOR LONGER HAIR ON TOP:

By not using a guide comb, a longer cut can be achieved. Use either a barber comb or a regular comb and lift the hair on top of the head, cutting over the comb, or grasp the hair between the fingers and cut to desired length. Continue this procedure from the front to the back of the head, gradually cutting the hair shorter by reducing the space between the comb or fingers and the head. Comb frequently to remove trimmed hair and check for uneven strands.

TAPERING AROUND EARS:

Using LEFT and RIGHT EAR GUIDE COMBS

The Left and Right Ear Guide Combs have a built in taper ranging from 1/8" to 1/2". By following the outline of the ear with the appropriate comb you achieve a gradual taper and blending without having to use multiple combs.

TO TAPER THE AREA BORDERING THE LEFT EAR:

Attach the Right Ear Guide Comb to your clipper. Stand facing the right ear and repeat the process described above for the left ear.

Finish by outlining the area around the ear as described in the following section.

OUTLINING: (Q)

No attachments are needed. Comb hair into desired style. Starting between the ear and the sideburns, as shown at left, hold clipper with corner edge against the hairline. Hold the clipper through the hair, as shown. Then cut the hair against the head and slowly move the clipper through the hair, as shown. Hold the clipper upside down, again against the hair, as shown. Against the hair and check that sides are even. Check for uneven spots throughout the haircut.

CREW CUTS AND SHORT CUTS: (R)

Starting with the longest guide comb, cut from the back of the neck to the crown. Hold the guide comb flat against the head and slowly move the clipper through the hair, as shown.

Use the same procedure from the lower side of the head to the upper side of the head, as shown. Then cut the hair against the direction in which it grows, from the front to the crown, and even up the cut with the sides.



To give a "flat-top" look, the hair on top of the head must be cut over the top of a flat comb, rather than using the guide comb.

Use close-cutting guide combs to "taper" the hair down to the neckline, as desired. Comb hair and check for uneven spots. Outline sideburns and neckline as previously described.

If a short, tapered cut on the sides and back, follow diagram S.

The five basic areas illustrated on the Wahl haircutting guide are your "road map" to easy, do-it-yourself haircutting. For tips on the latest trends and fashions in haircutting, visit us at www.wahl.com.

If you reside within the EU and your unit is marked with the following symbol do not discard in trash. This product is to be returned to the appropriate municipal waste collection facility for recycling and recovery.

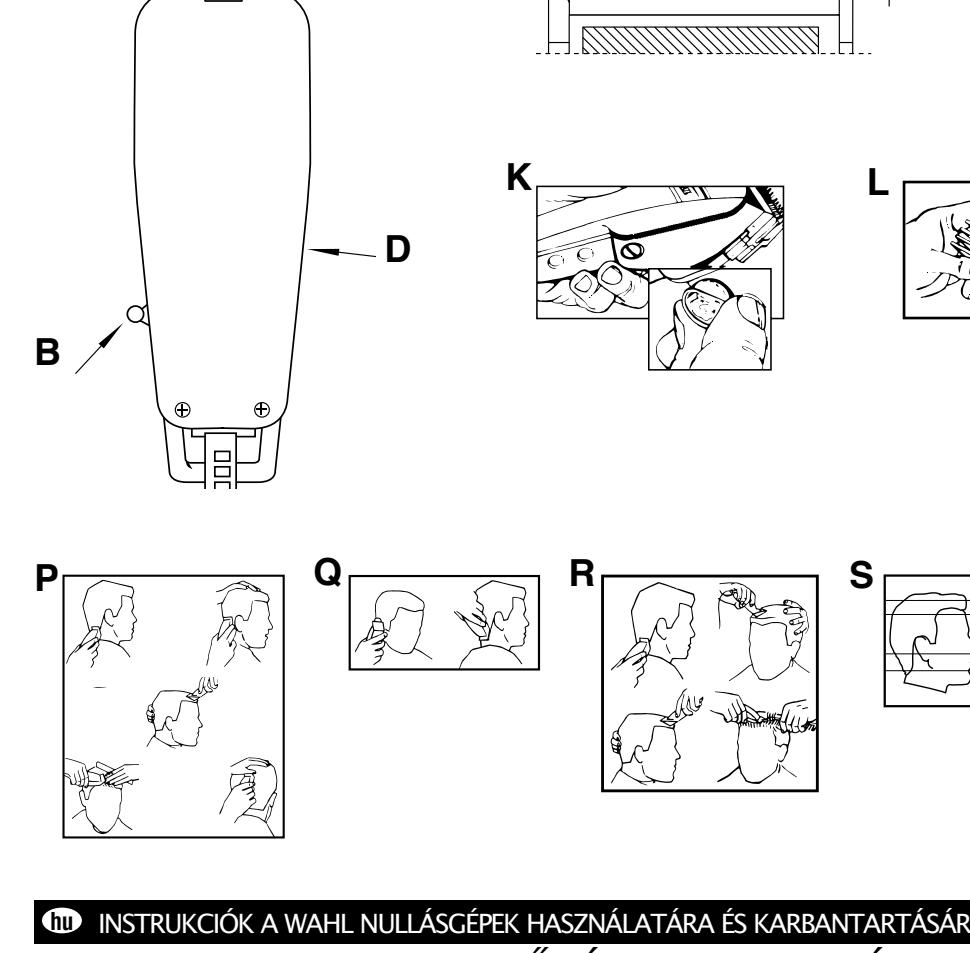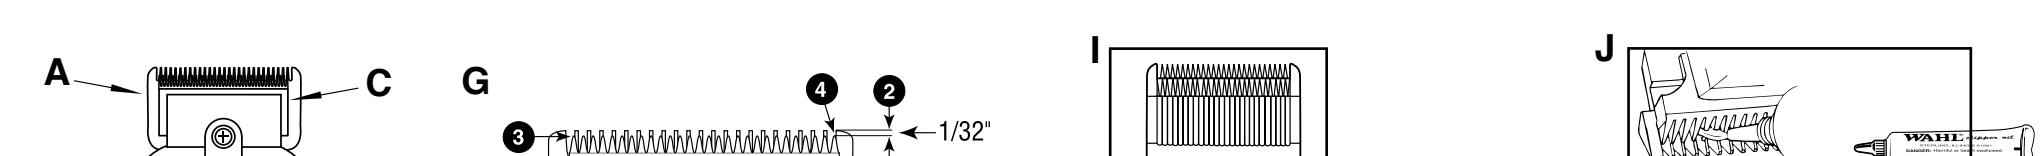

INSTRUKCIÓK A WAHL NULLÁSCÉPEK HASZNÁLATÁRA ÉS KARBANTARTÁSÁRA

FONTS BALESETMEGELŐZÉSI TUDNIVALÓK

ha elektromos eszközt használ, alapvető balesetmegelőzési intézkedéseket kell tenni, beleértve az alábbi pontokban foglaltakat is.

(Használata előtt olvasson el minden instrukciót.)

VESZÉLY

Az áramütés okozta halálos vagy sérülés veszélyének összefoglaló érdekelésében.

- 1 Ne myújóni utána olyan készülékeket, amely víze esett. Azonnal válassza le a hálózatról. Némelyik elektromos eszköz részben a nullásplaggal áramlatot adhat a vízre.
- 2 Ne használja fürdő vagy zuhanysorban.
- 3 Ne helyezze vagy tárolja a berendezést olyan helyen, ahonnan belehehet, vagy belecsúsztathat egy felhővel vagy mosogatásba. Ne tegye vagy dobja bele vízbe vagy más folyadékba.
- 4 Használata után, az újratöltek kivételével mindenkor hűtőt kell húzza ki a berendezést a hálózatról.

FIGYELEM

Az égéses, tűz, áramütés vagy emberi sérülés veszélyének csökkenése érdekelében.

- 1 Az áramát elhelyezni kell berendezést soha ne hagyja örizetlenül.
- 2 Ez a készülék csak olyan személyek számára (helyérre gyermekekkel rendelkezők), illetve nincs megfelelő tapasztalattal, testi erővel, érzékeléssel vagy szellemi képességekkel rendelkezők, illetve nem kapnak általában használni a készüléket, ha nem alkalmazkodik az érdeklődéshez.
- 3 A berendezést csak rendeltetés szerint használja, ahogy az ebben az útmutatóban van írva. Ne használjon olyan készüléket, amelyet nem személyesen ismer.
- 4 Az esetleges környezeti kihívások ellenére, hogy a készülék mindenkor hűtőt kell húzza ki a berendezést.
- 5 A készülék csak rendeltetés szerint használható, amelyet a gyerek kezelésével.
- 6 Soha ne nyújtson a készüléket a gyerek előtt, mivel a gyerek a készüléket használhatja.
- 7 Ne dobsony a készüléket a gyerek előtt, mivel a gyerek a készüléket használhatja.
- 8 Ne használjon szabadtéri személyt a készüléket.
- 9 Ne használjon szabadtéri személyt a készüléket.
- 10 Ne használjon szabadtéri személyt a készüléket.
- 11 Ne használjon szabadtéri személyt a készüléket.
- 12 Ne használjon szabadtéri személyt a készüléket.
- 13 Ne használjon szabadtéri személyt a készüléket.

9 Ne használja a készüléket személyzet nélkül, amelyet a gyerek kezelésével.

10 Ne használja a készüléket személyzet nélkül, amely

